

150 Dodd Street SE
Marietta, GA. 30060

Phone: 770-973-6251
Fax: 678-401-3854

Email: info@mgs4u.com
Website: www.mgs4u.com



Installation Guide


[QC sleeve for standard crimp on UHF-male](#)

Installing this QC sleeve onto a connector already installed on a piece of coax is done in only two steps

Step 1

Unscrew the outer shell of your connector back onto the coax.

Tip: You can either let the outer shell loosely hang onto your piece of coax OR grab a piece of tape and tape in onto the coax.

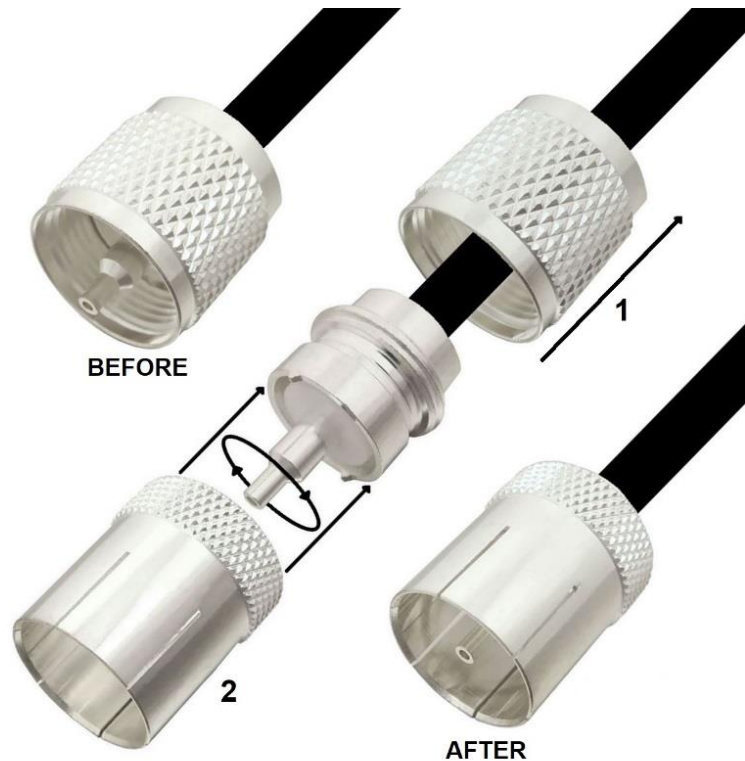

Step 2

Screw the QC sleeve into place from the front of the connector's main body.

Your crimp on UHF male connector has now been converted into a quick connect version without adding the loss from adding an adapter.

Click the following link to obtain additional part information including price, inventory and certifications: <https://mgs4u.com/product/7505-qc/>